

1	SP19360 SP19361 SP19362 SP19363 SP19364 SP19365 SP19366 SP19367	Pushbutton Pushbutton Pushbutton Pushbutton Pushbutton Pushbutton Pushbutton Pushbutton	XL2 XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	9.00
1A	SP19349	Knob (lower Portion of Pushbutton)	XL	4.00
2	SP001-B	Upper arbor	XL	31.50
3	SP003LM	Calib. knob Complete	XL	38.00
3a	SP003-C	Calibration screw	XL	6.60
5	SP003-E	Fixing screw	XL	1.50
6a	SP9385	O-ring	XL	1.80
7	SP009-XL	Shaft nut	XL2 thru. XL1000	3.00
8	SP005-2 SP005-10 SP005-20 SP005-100 SP005-200 SP005-1000 SP005-5000 SP19463	Piston assembly Piston assembly Piston assembly Piston assembly Piston assembly Piston assembly Piston assembly Piston assembly	XL2 XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	39.00 39.00 39.00 39.00 39.00 39.00 39.00 60.00
9	SP005A-100	Spring	XL2 thru. XL100	3.00
10	SP005A-200	Spring	XL200	3.50
11	SP005-D	Stopper bushing	XL2 thru. XL200	2.00
12	SP9321	Compression spring	XL2 thru. XL200	3.00
13	SP005-B	Bushing	XL2 thru. XL200	2.00
14	SP011-2 SP011-10 SP011-20 SP011-100 SP011-200 SP011-1000 SP011-5000 SP19464	Compression bushing Compression bushing Compression bushing Compression bushing Compression bushing Compression bushing Compression bushing Compression bushing	XL2 XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	4.50 3.50 3.50 3.50 3.50 3.50 3.50 3.50
15	SP006-2 SP006-10 SP006-20 SP006-100 SP006-200 SP006-1000 SP006-5000 SP19465	Teflon seal Teflon seal Teflon seal Teflon seal Teflon seal Teflon seal Teflon seal Teflon seal	XL2 XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	6.00 6.00 6.00 6.00 6.00 6.00 6.00 6.00
16	SP007-2 SP007-10 SP007-100 SP007-200 SP007-1000 SP007-5000 SP19002	O-ring 0.74x1.02 O-ring O-ring O-ring O-ring O-ring O-ring 25x2	XL2 XL10, XL20 XL100 XL200 XL1000 XL5000 XL10000	9.00 4.00 4.00 4.00 4.00 4.00 4.00
17	SP010-10XL SP9442 SP010-100XL SP010-200XL SP010-1000XL SP19452 SP19453	Tip ejector Tip ejector Tip ejector Tip ejector Tip ejector Tip ejector Tip ejector	XL2, XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	19.00 19.00 19.00 19.00 19.00 30.00 35.00
18	SP008-2LM SP008-10LM SP008-20LM SP008-100LM SP008-200LM SP008-1000LM SP008-5000LM SP008-10000LM	Shaft Shaft Shaft Shaft Shaft Shaft Shaft Shaft	XL2 XL10 XL20 XL100 XL200 XL1000 XL5000 XL10000	14.00 14.00 14.00 14.00 14.00 14.00 14.00 14.00
20	SP003-A	Friction ring	XL	3.00
21	SP012-SS	Spacers set.	XL	6.60
22	SP002-EB1	Ejector button I	XL	6.00
22a	SP002-EB2	Ejector button II	XL	6.00
25	SP9438 SP19402	Ejector arbor Ejector arbor	XL2-1000 XL5000, XL10000	18.00 18.00
25a	SP9012	Ring 3z	XL	2.10
26	SM9479	Calibration key	XL	9.00
27	SP19454	Filter	XL5000, XL10000	1.00
28	SP19466 SP19469	Ejector cap Ejector cap	XL5000 XL10000	9.00 9.00

